

## THANK YOU

We truly appreciate your support and hope you experience coffee freedom with your **ProUser espresso**!



Check us out



User guide

[www.provistahk.com/prouser/](http://www.provistahk.com/prouser/)

LET'S CONNECT



We would love to see what you get up to with your **ProUser espresso**!




**ProUser espresso**

Fastest Portable Espresso Machine

INSTRUCTION MANUAL

## PRODUCT OVERVIEW

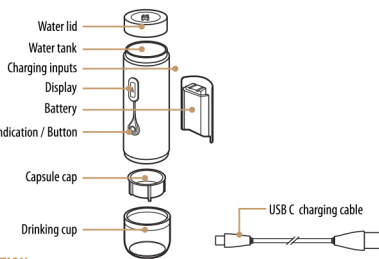

### OPERATION INDICATION

OPERATION	LED INDICATION	DESCRIPTIONS	STATUS	AUDIO ALERT
Button - Press Once		1 Orange LED Battery Level 25%	Power on with battery level display	None
		2 Orange LEDs Battery Level 50%		
		3 Orange LEDs Battery Level 75%		
		4 Orange LEDs Battery Level 100%		
Connected to a power source through cable		Flashing 1st Orange LED Battery charging towards 25%	Charging Battery	Beep Once after plug in
		Flashing 2nd Orange LEDs Battery charging towards 50%		
		Flashing 3rd Orange LEDs Battery charging towards 75%		
		Flashing 4th Orange LEDs Battery charging towards 100%		
		4 Orange LEDs fully lit Battery charged 100%		
Connected to a power source through cable with No battery installed		4 Flashing Orange LEDs	No Battery charging	
Button - Press & Hold for 2 Seconds		Flashing 1 Orange LED	Warning Battery Low	Beep six times before shutting down
		Flashing RED LEDs + Battery Level Indicator	Initiate water boiling process	Beep Twice
		Flashing BLUE LEDs + Battery Level Indicator	Dispense Automatically	Beep Once when it is completed
Button - Press & Hold for 5 Seconds		Flashing BLUE LEDs + Battery Level Indicator	SKIP water boiling process & dispense immediately	Beep Twice
		2 BLUE LEDs + Battery Level Indicator	Dispense Automatically	Beep 5 times when it is completed
		Flashing RED & BLUE LEDs	System Warning	Beeping Continuously

## BEFORE FIRST TIME USE

**(A1)** Unscrew the drinking cup and water lid then clean the drinking cup, capsule cap and inside the water tank with a soft sponge, water and detergent. Screw the drinking cup and water lid back onto the machine when dry.

**IMPORTANT NOTE:** DON'T WASH MAIN BODY OF MACHINE. Only wash the drinking cup, capsule cap and inside the water tank.

**(A2)** Insert the battery

### CHARGING VIA USB C CHARGING CABLE (CERTAIN MODELS ONLY)

Plug the USB C charging cable into the machine then then into a USB mains power adaptor. Allow 6-8 hours charging time.

**IMPORTANT NOTE FOR CHARGING:** FULL is displayed when the battery is fully charged.

### COFFEE MAKING PREPARATION

**(B1)** Turn the machine upside down then unscrew the drinking cup and capsule cap.

**(B2)** Place a capsule into the capsule cap insert. Press the capsule down until flat.

**(B3)** Screw the capsule cap and drinking cup back onto the machine.

**(B4)** Turn the machine right side up then unscrew the water lid.

**(B5)** Pour water up to the **max level mark**.

**(B6)** Screw the water lid back onto the machine. The machine is now ready to make coffee.

### MAKING YOUR COFFEE

**(B7)** Using cold water to boil: Hold button down for 2 seconds. 2 beeps will sound, the light indicator inside the button will keep flashing blue. When the water temperature reaches a predetermined temperature the machine will switch to the pumping and extraction process. When boiled hot water is prepared, you can press and hold the button for 5 sec, boiling process would be skipped and coffee brewing would be activated directly.

**(B8)** In a few minutes, you will hear 5 beeps, the display will show "ENJOY" and your coffee will be ready. Unscrew the drinking cup and enjoy!

**(B9)** To turn off the machine press the button once.

